

ZTE Router Quick Installation

Installing the ZTE Router to an LTE Connection

1. Plug the LTE into the WAN port (**Figure 1**)
2. Power on the ZTE Router
3. Plug the Customer Router into Port 4 (**Figure 2**)
4. Configure the Customer Router for a Static IP
5. Call support for activation, at **1-855-638-7381**
6. For additional information, please reference the [ZTE Router Full Installation Guide](#)

IP Information

IP: 173.210.180.x
(Customer IP labelled on ZTE Router)
Subnet Mask: 255.255.254.0
Gateway: 173.210.180.1
DNS: 8.8.8.8

Figure 1



Figure 2

